


CONNECT Workspace Setup For MicroStation and OpenRoads Designer


These instructions assume CADD work solely for LA County Public Works. If your organization works with multiple CADD Standards, check with your CADD administrator on how best to setup this workspace.

1. Use these instructions for the following software:
 - a. MicroStation CONNECT Edition
 - b. OpenRoads Designer CONNECT Edition
2. Download https://pwgis.blob.core.windows.net/cad/standards/LACOPW_CONNECT.zip and decompress the file to C:\
3. Copy workspace:
 - a. Create this folder if it doesn't exist `C:\ProgramData\Bentley\LACOPW_CONNECT`. If it exists, delete contents inside.
 - b. From the location:
`C:\LACOPW_CONNECT`

Copy the “**Configuration**” folder:

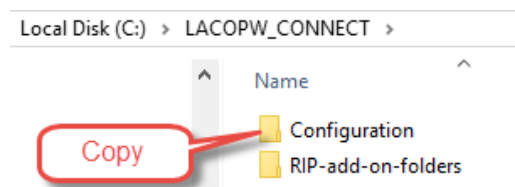

- c. Paste into `C:\ProgramData\Bentley\LACOPW_CONNECT`

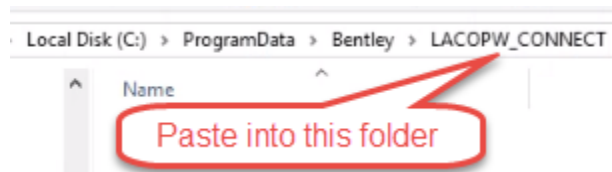

NOTE: The following process only adds files to the folder and does not replace the folder. Do not delete the existing “Bentley” folder. This process is merging the files.

4. Copy “**Bentley**” folder:

a. Copy from:

[C:\LACOPW_CONNECT\RIP-add-on-folders\64-bit\ProgramData](#)

b. Paste to the root of [C:\ProgramData](#) (this is a hidden system folder) and select “*Replace the files in the destination*” if prompted.

5. Copy “**MyFiles**” folder:

a. Copy from:

[C:\LACOPW_CONNECT\RIP-add-on-folders\64-bit\](#)

b. Paste to the root of [C:\](#).